



ASSEMBLY:

- 1 Place two of the pegboard panels with the large holes on bottom into the wheeled base and then slide 1 corner pole in the corner of the two pegboards.
- 2-3 Place third pegboard panel into base and then slide 1 corner pole in the corner. Repeat with fourth pegboard panel and the remaining corner poles.
- 4 Snap each pusher screw in place on the bottom of the base. Secure the top cap with the screws gently.
- 5 Adhere the t-strip to top cap.

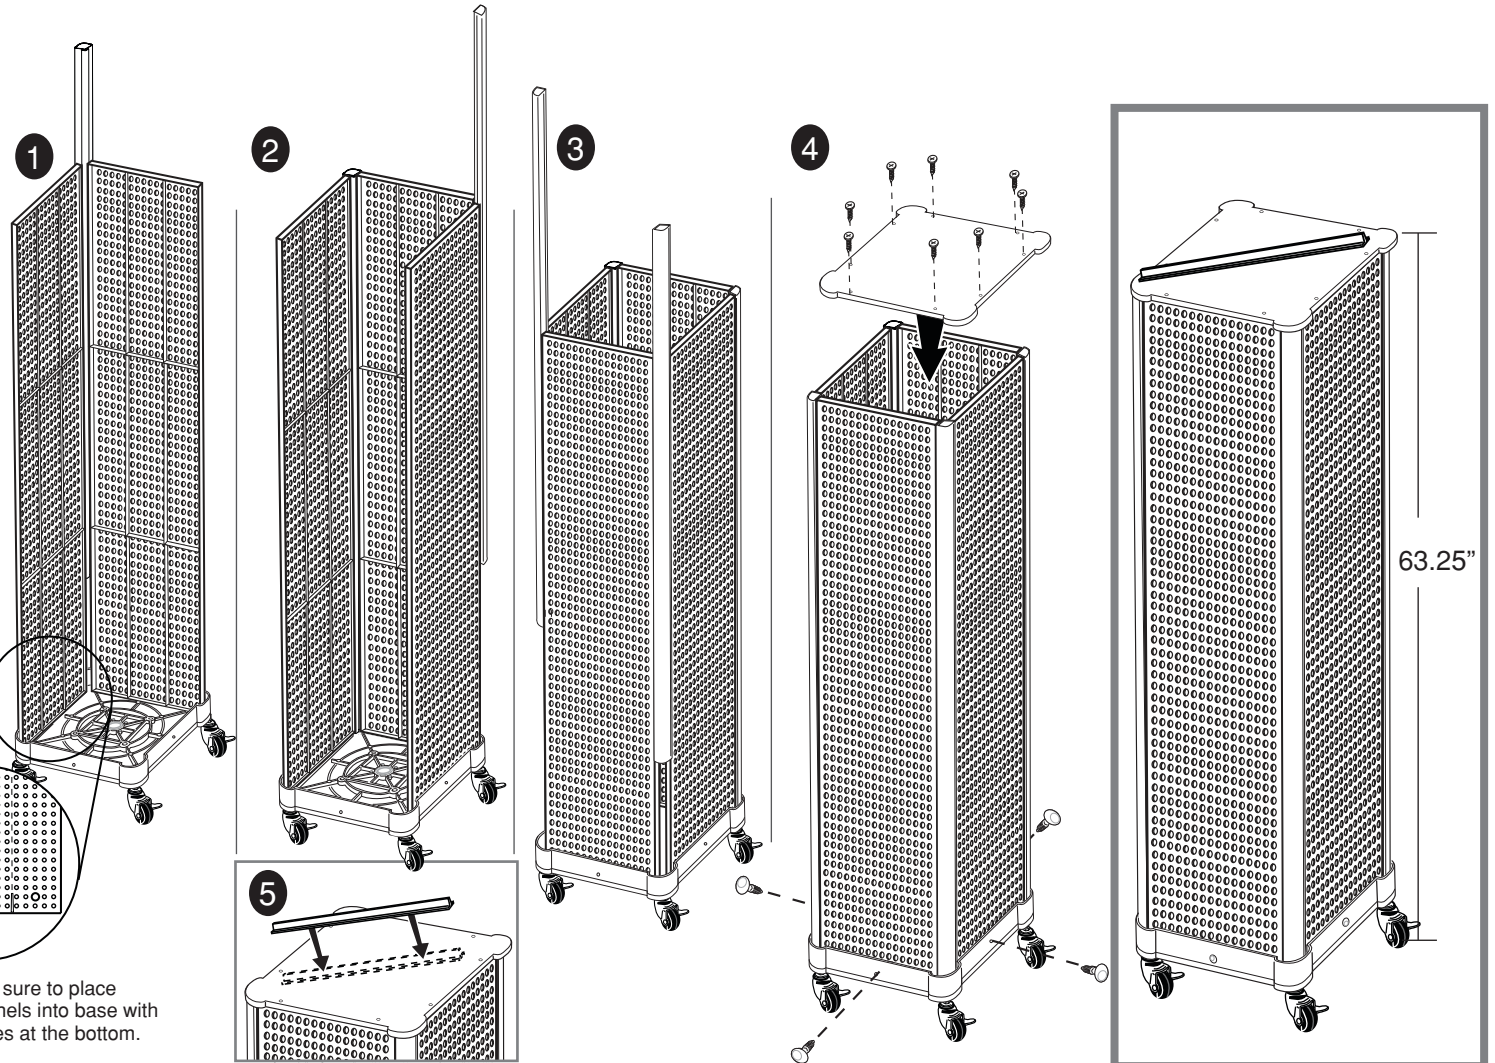


PART# 771660

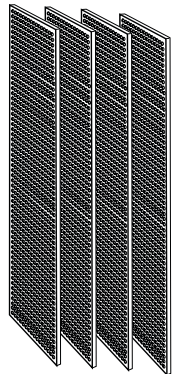


4 pcs.

16" X 60"
PEGBOARD PANELS

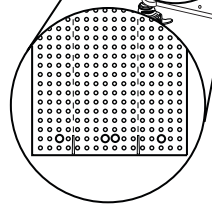

NOTE: Make sure to place
pegboard panels into base with
the large holes at the bottom.


PART# SQUARE400

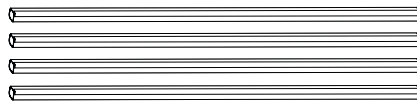

4 pcs.

60" CORNER POLES


PART# P-B700405-BASE/P-DH-WHL

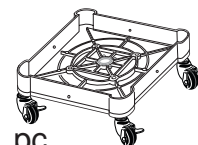

1 pc.

PLASTIC WHEELED BASE

PART# P-B700405-TOP

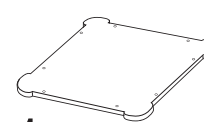

1 pc.

TOP CAP




4 pcs.

PLASTIC
PUSHER SCREWS



8 pcs.

SCREWS



1 pc.

16" T-STRIP
W/ ADHESIVE TAPE