



ASSEMBLY:

- 1** Align the three pegboard panels onto the wheeled base, then insert into place one panel at a time. Then secure into place with provided screws and wing nuts.
- 2** Align the top piece to the pegboard tower and place on top. Secure the assembled pegboard by screwing it into place.
- 3** Peel adhesive tape back off t-strip and adhere to top piece.

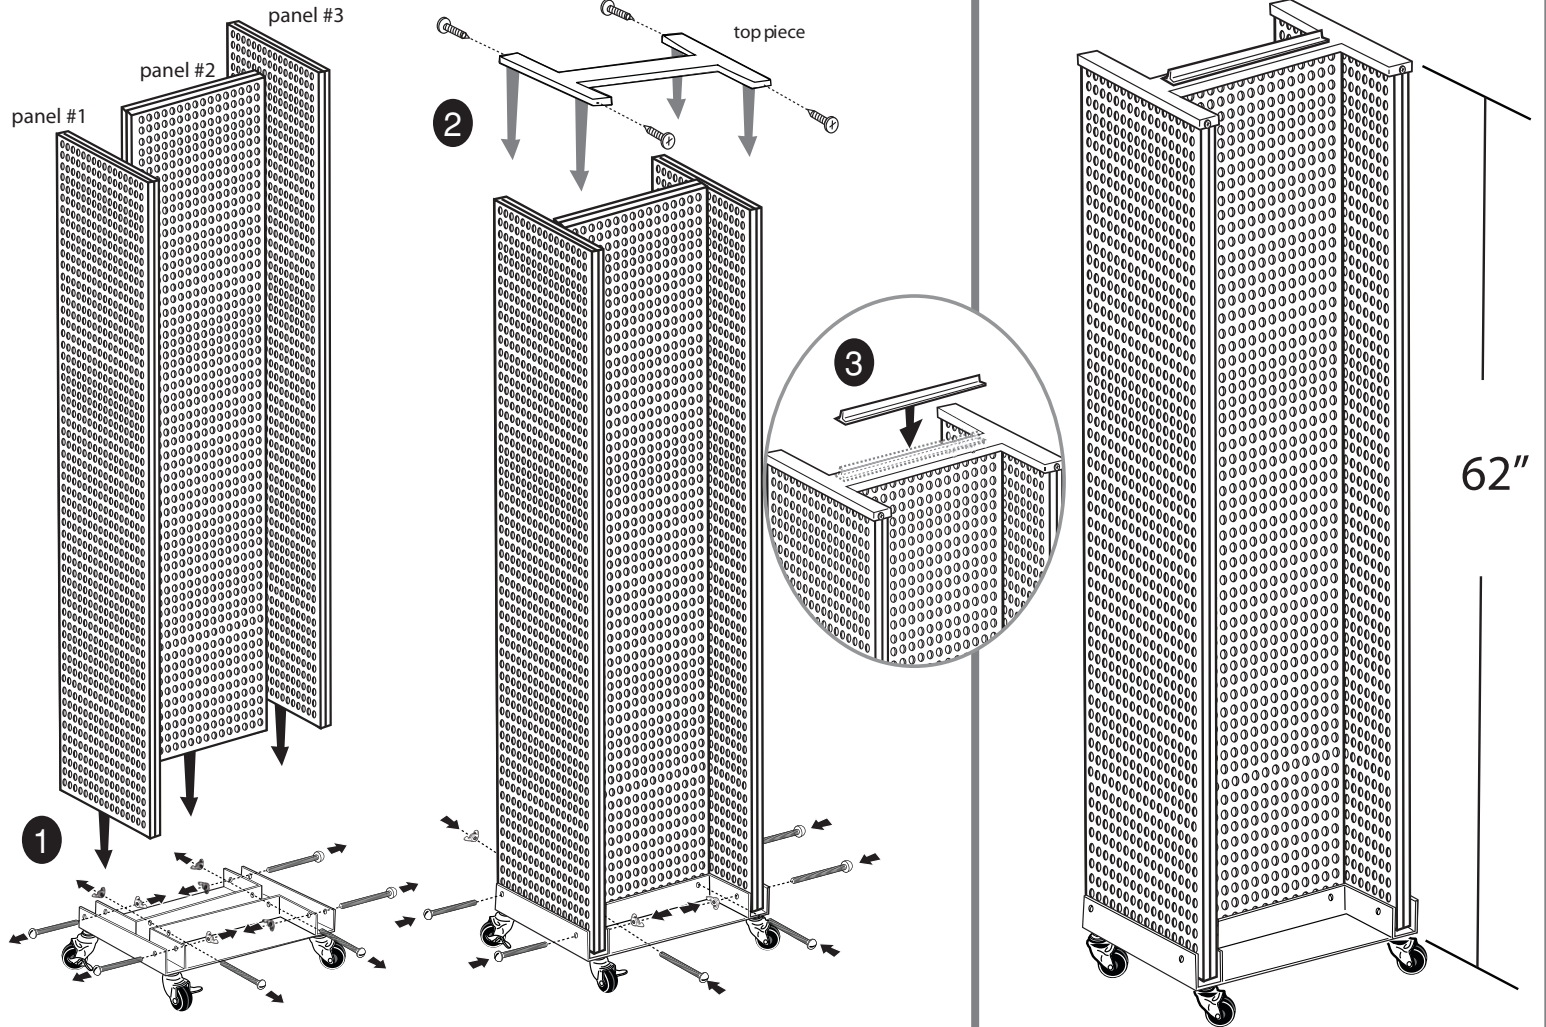


771660

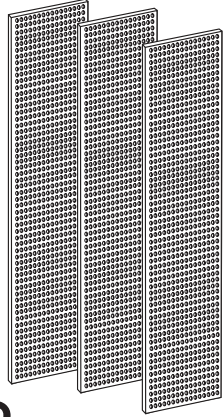

3 pcs.

16" X 60" DOUBLE SIDED
PEGBOARD PANELS


P-B700432-SLV-B
P-DH-WHL

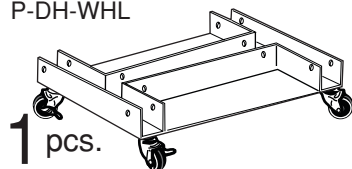

1 pcs.

METAL BASE WITH WHEELS

P-B700430-SLV-T

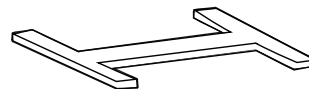

1 pcs.

TOP PIECE


700046



1 pcs.

16" T-STRIP

P-SCREW-2.5

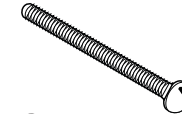

6 pcs.

BOLTS

P-WNUT 102P



6 pcs.

WING NUTS

P-SCREW
625 SM



4 pcs.

SCREWS