

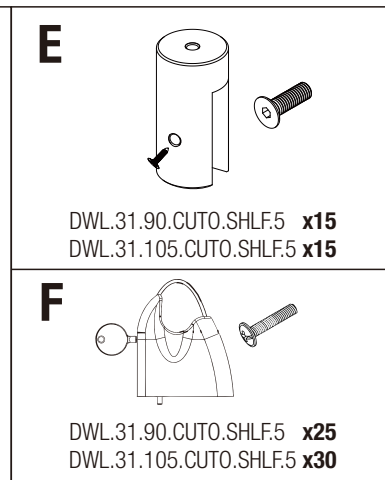
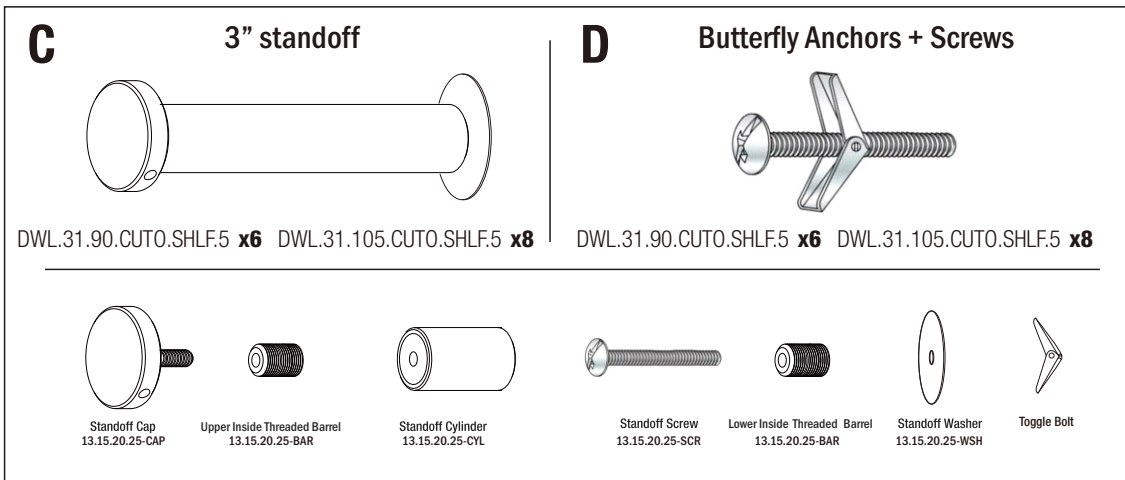


# Lockable DW Cutout Shelf panels

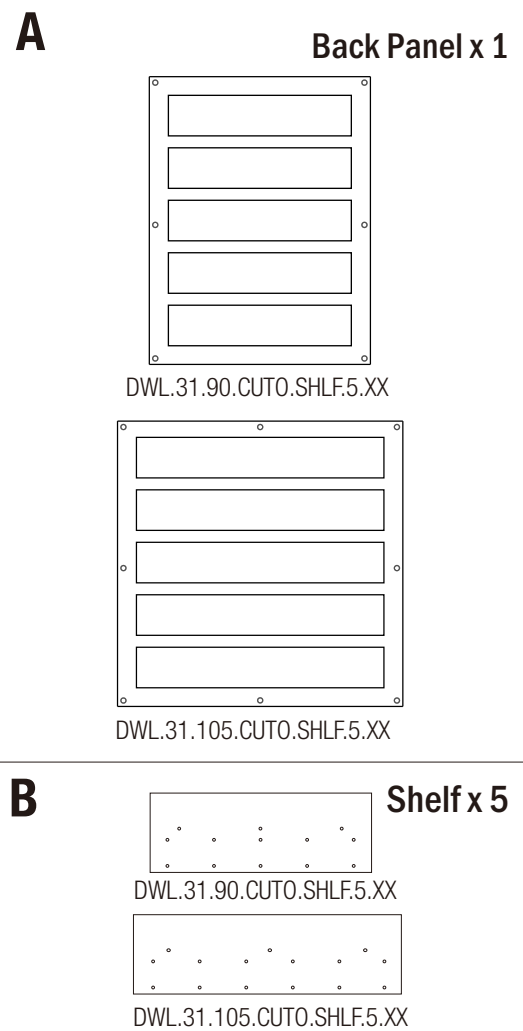




Place the back panel on the wall and mark standoff holes.

Step 1

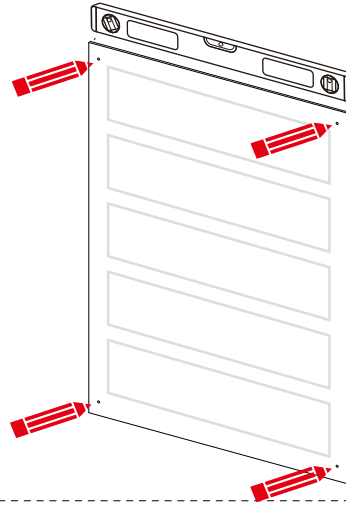


Install the standoffs on the marked spots on the wall

Step 2

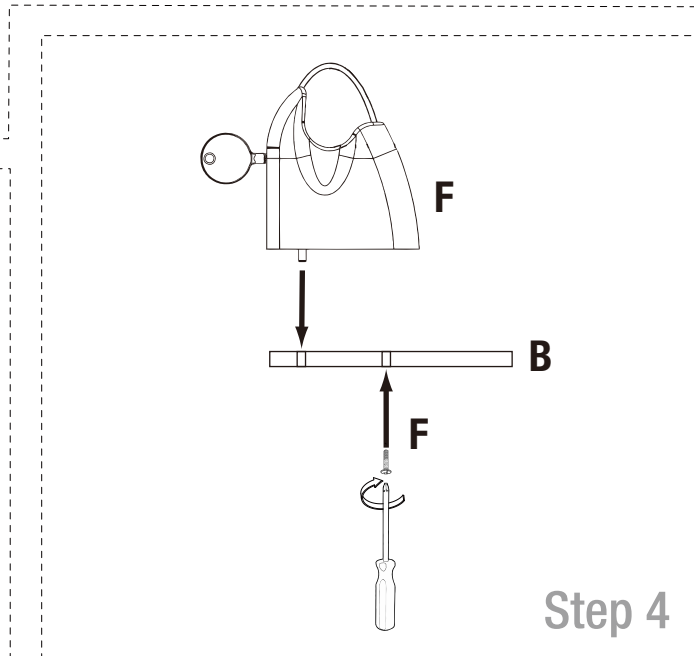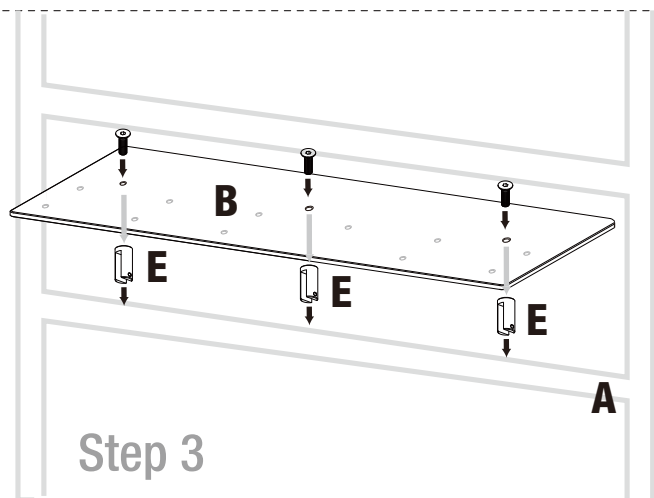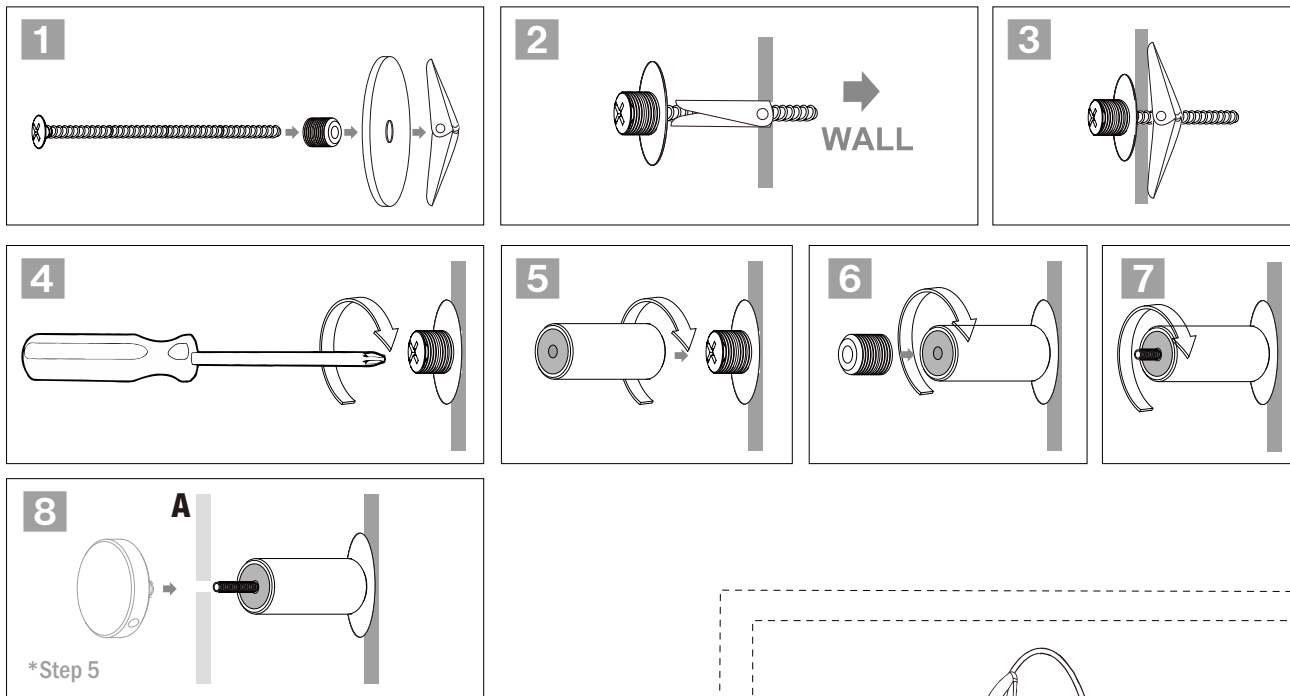

Place the complete panel and shelves on to the standoffs  
and secure them with the caps

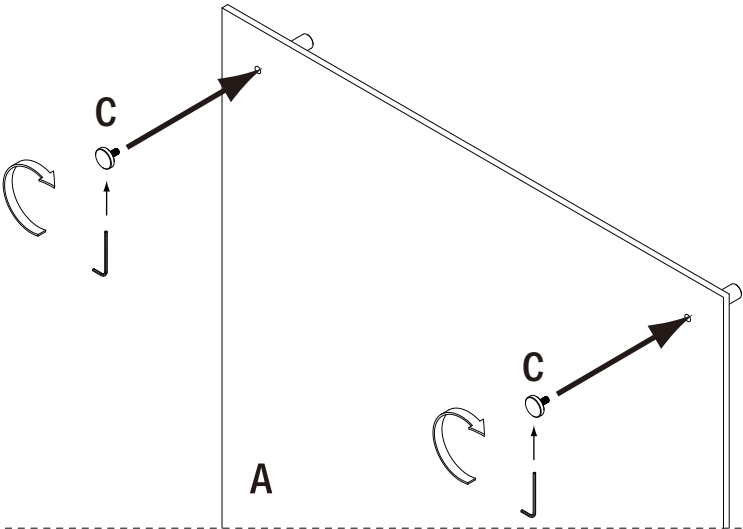

Step 5