PLAN VIEW

1/2" = 1'-0"

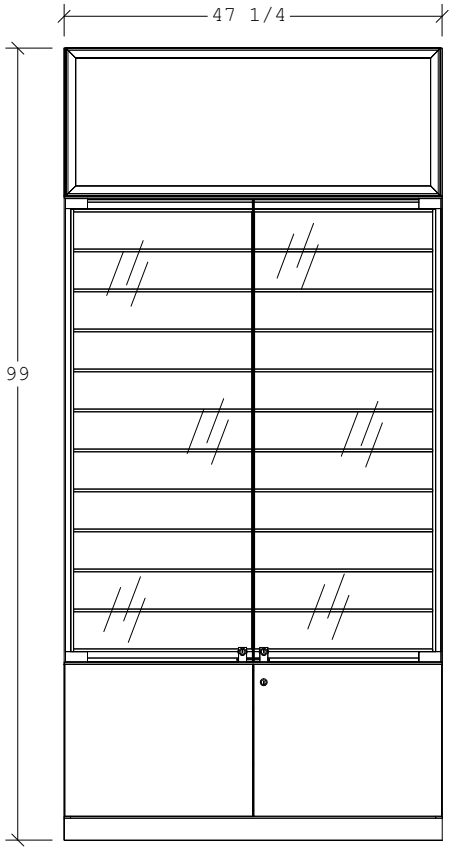

FRONT VIEW

1/2" = 1'-0"

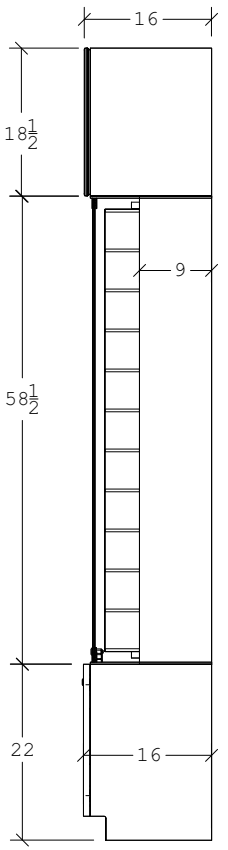

END VIEW

1/2" = 1'-0"

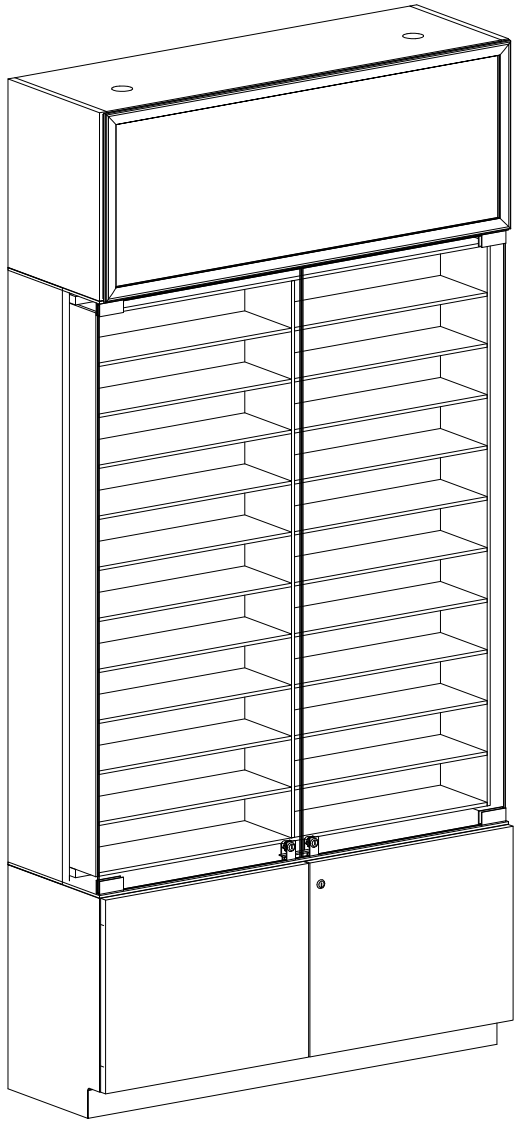

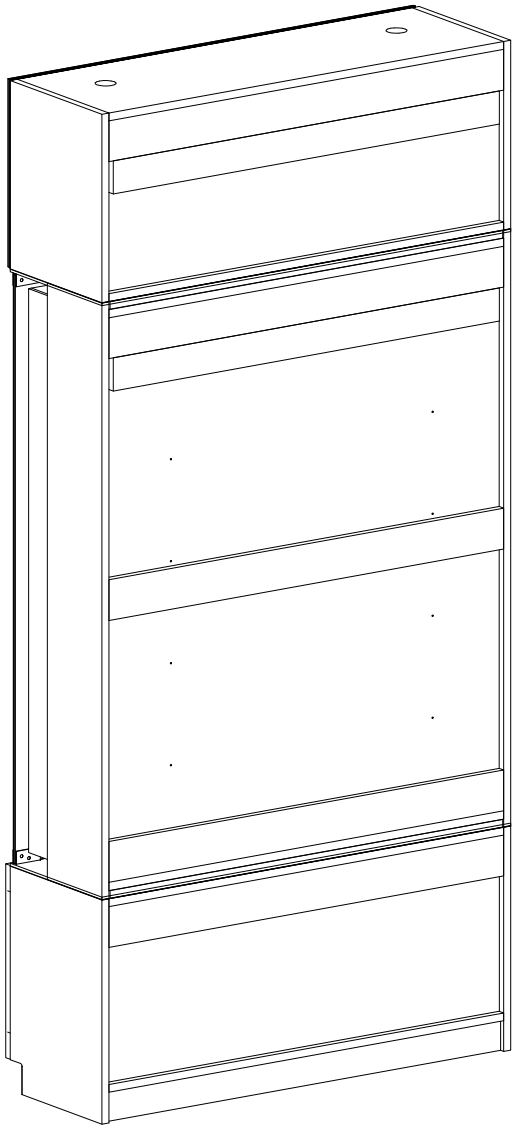

TREND-48 Eyewear & Sunglass Wall Cabinet Assembly Instruction

Frame Displays USA
22821 Silverbrook Center Dr., Suite 140, Sterling, VA 20166
1-703-435-7770
www.framedisplays.com • info@framedisplays.com

Frame Displays CANADA
416-877-7415
www.framedisplays.com • info@framedisplays.com

Other international +1 703-435-7770
Fax +1 703-435-3180

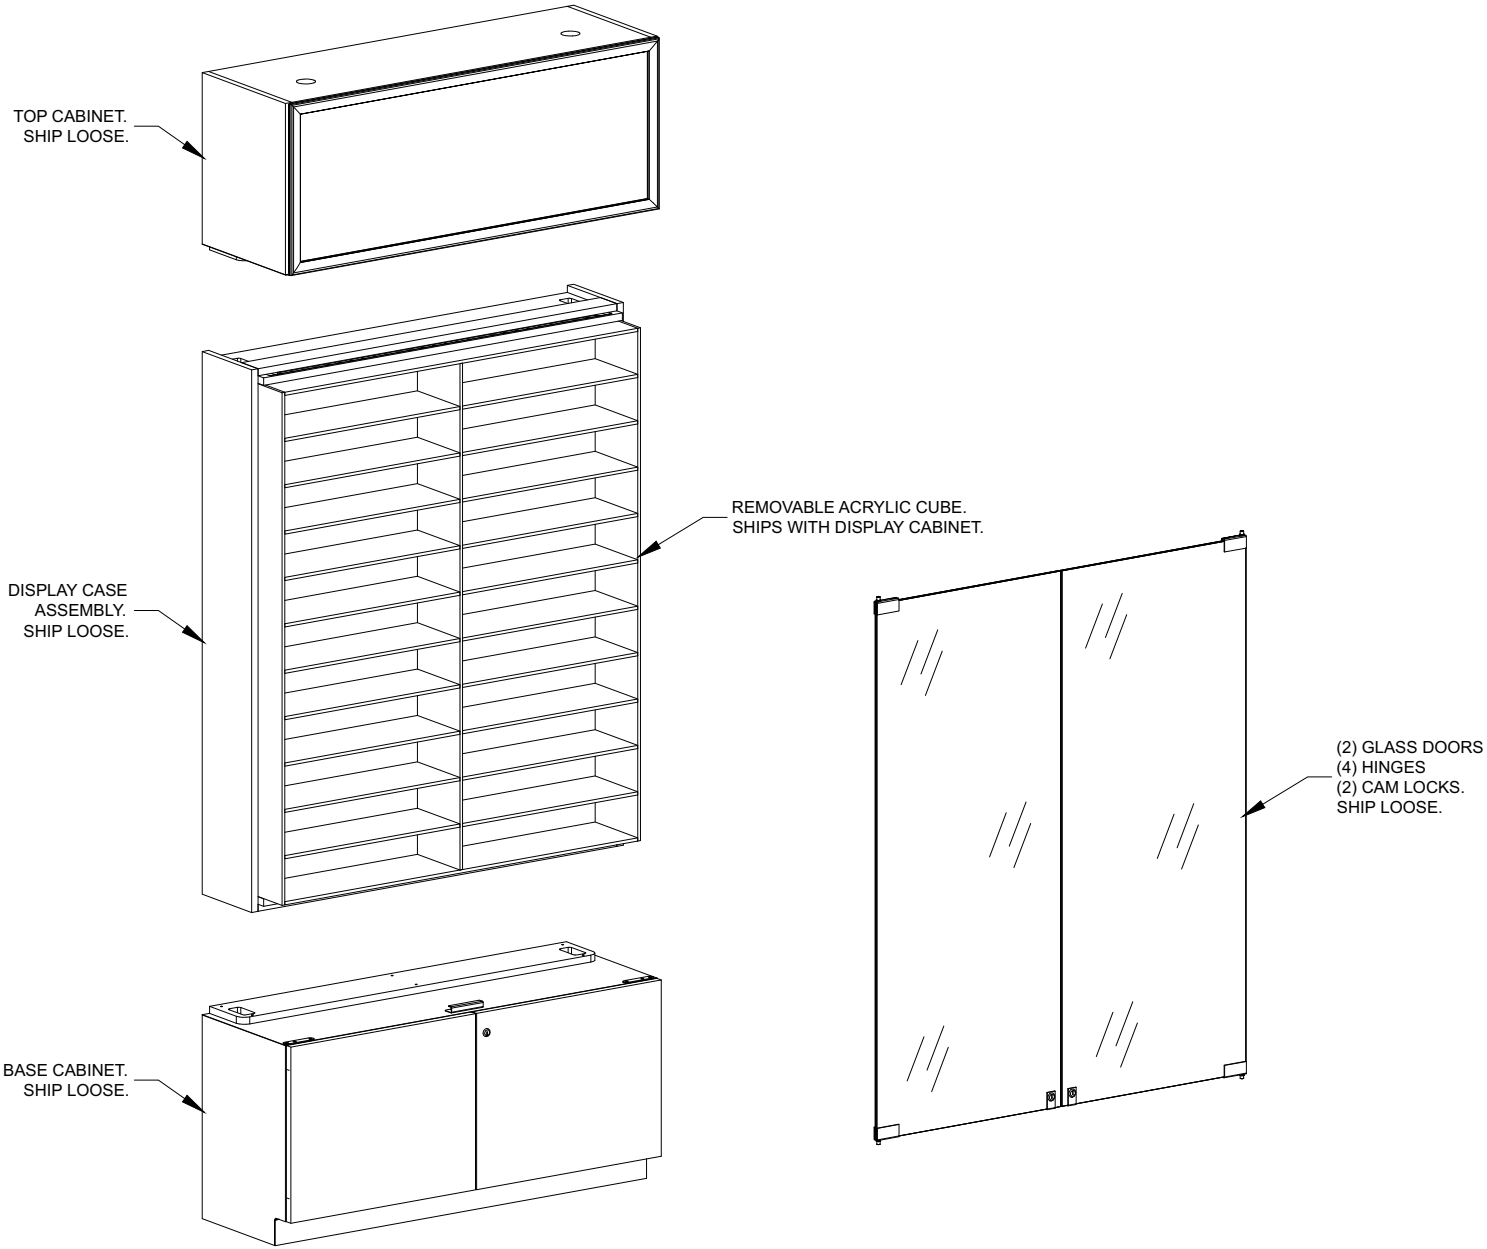

TREND-48 Eyewear & Sunglass Wall Cabinet Assembly Instruction

Frame Displays USA
22821 Silverbrook Center Dr., Suite 140, Sterling, VA 20166
1-703-435-7770
www.framedisplays.com • info@framedisplays.com

Frame Displays CANADA
416-877-7415
www.framedisplays.com • info@framedisplays.com

Other international +1 703-435-7770
Fax +1 703-435-3180

1) SET BASE CABINET IN PLACE.

2) SECURELY ATTACH FRENCH CLEATS TO STORE WALL.
CLEATS MUST BE ATTACHED TO WALL STUDS.

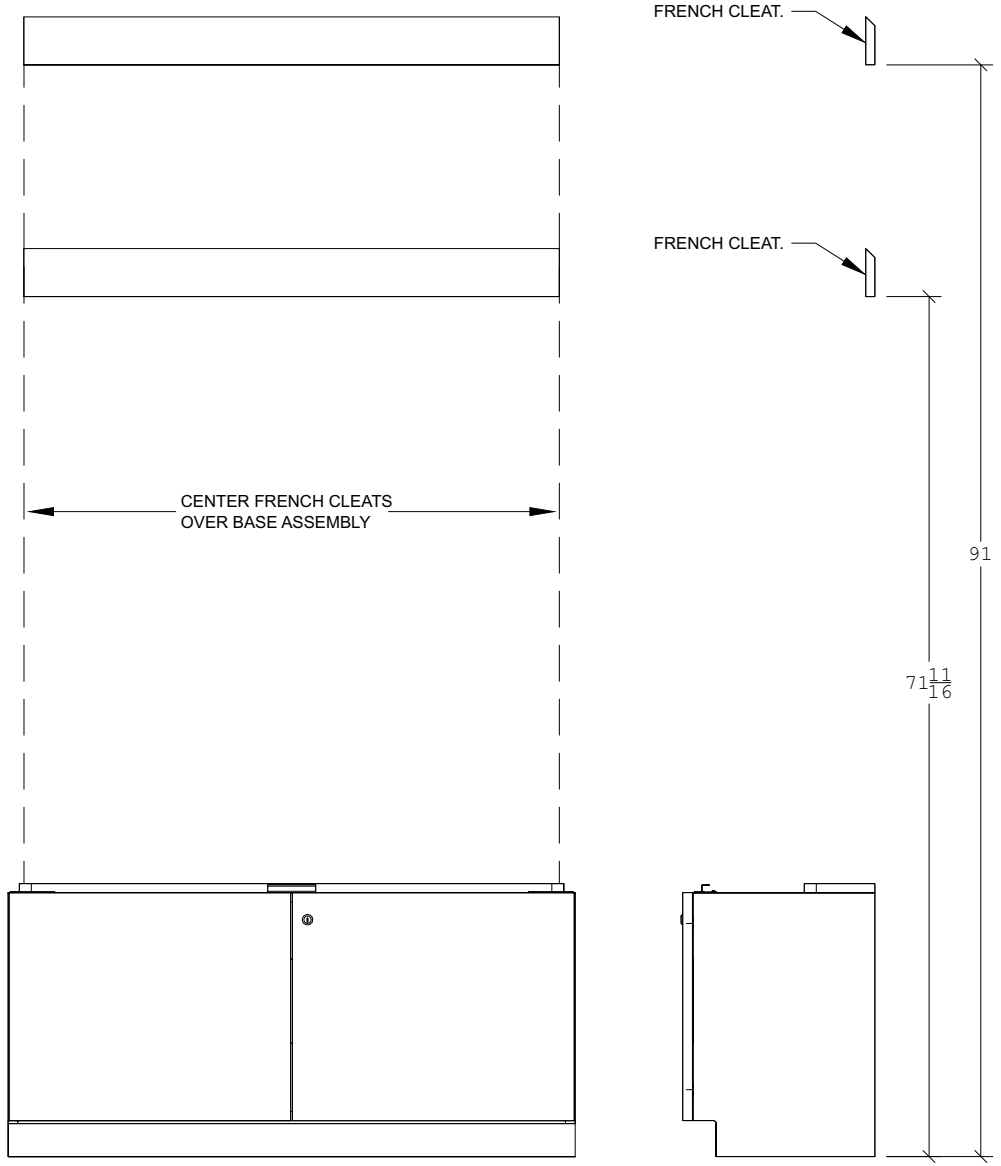

TREND-48 Eyewear & Sunglass Wall Cabinet Assembly Instruction

Frame Displays USA
22821 Silverbrook Center Dr., Suite 140, Sterling, VA 20166
1-703-435-7770
www.framedisplays.com • info@framedisplays.com

Frame Displays CANADA
416-877-7415
www.framedisplays.com • info@framedisplays.com

Other international +1 703-435-7770
Fax +1 703-435-3180

3) CAREFULLY REMOVE ACRYLIC CUBE FROM DISPLAY CASE.

4) SET DISPLAY CASE ONTO BASE CABINET AND VERIFY DISPLAY CASE IS SECURED BY FRENCH CLEAT.

5) MAKE SURE ALL LIGHT POWER CORDS DROP DOWN INTO BASE CABINET.

6) PLUG (2) RIBBON LIGHT CORDS INTO LED DRIVER, AND (1) LIGHT FIXTURE POWER CORD INTO SURGE PROTECTOR.

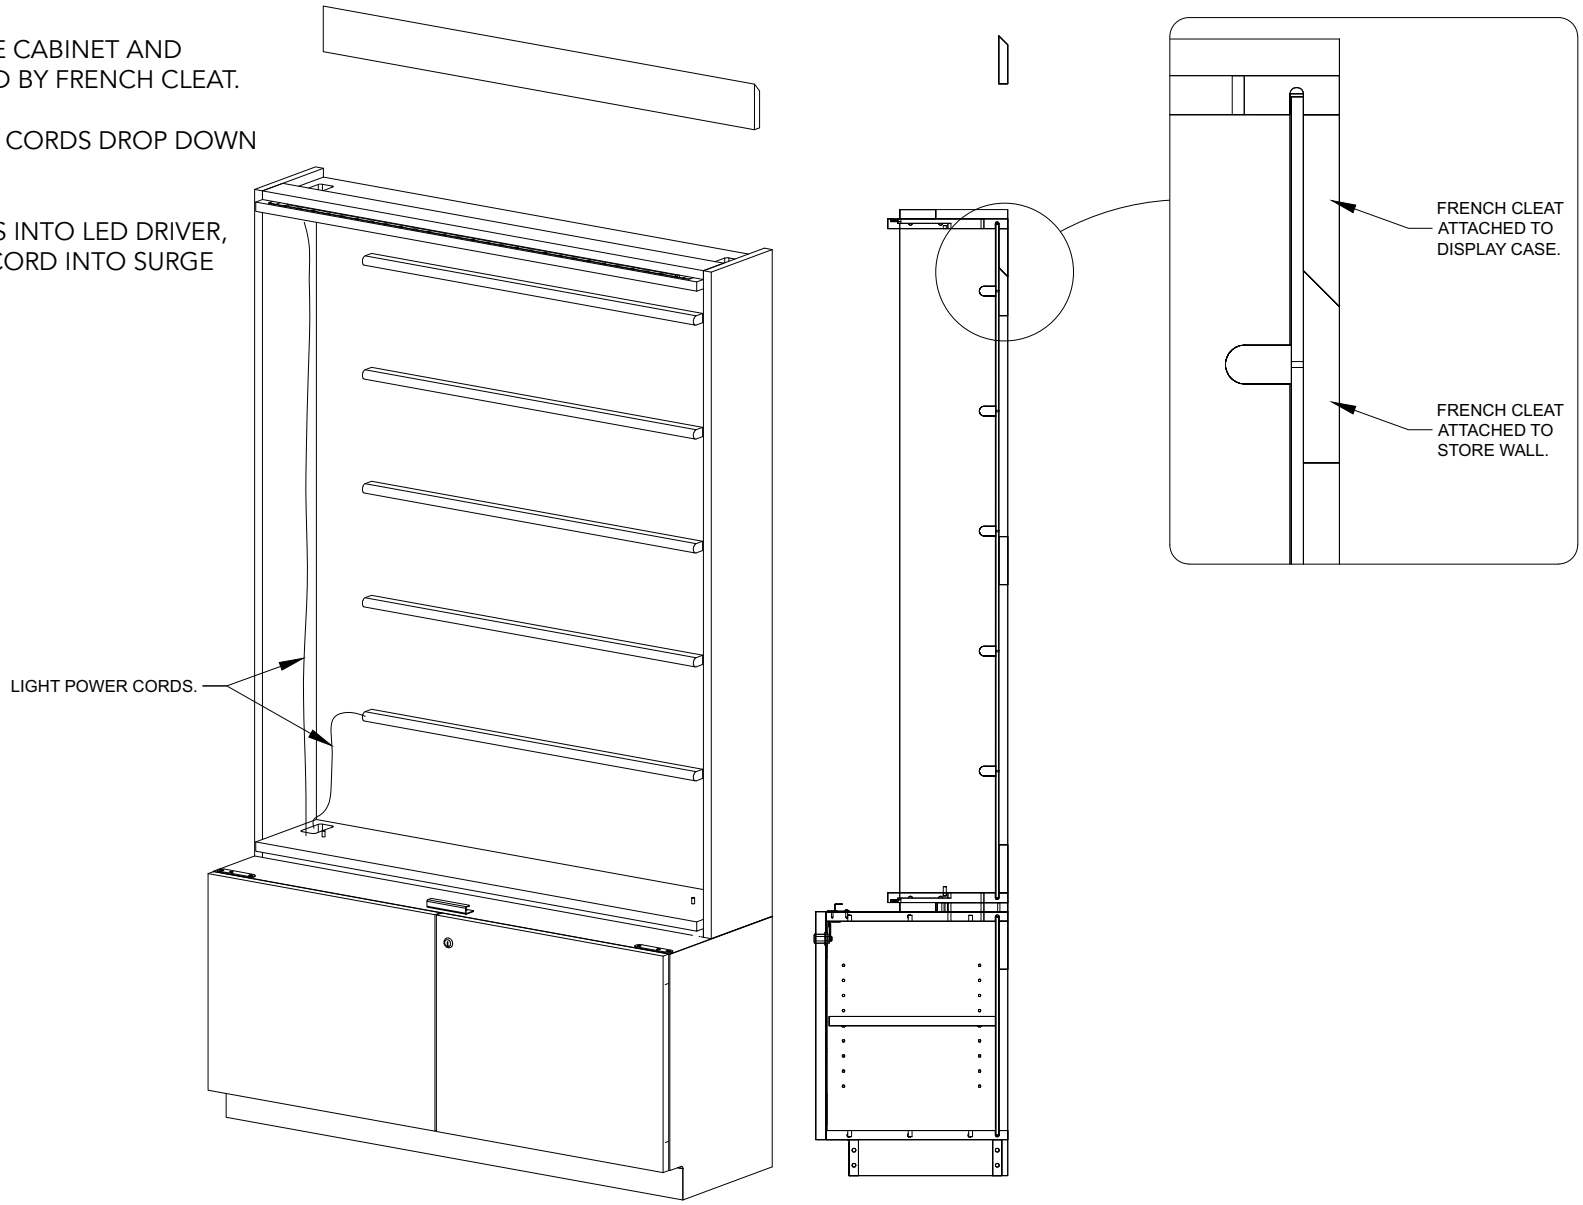

TREND-48 Eyewear & Sunglass Wall Cabinet Assembly Instruction

Frame Displays USA
22821 Silverbrook Center Dr., Suite 140, Sterling, VA 20166
1-703-435-7770
www.framedisplays.com • info@framedisplays.com

Frame Displays CANADA
416-877-7415
www.framedisplays.com • info@framedisplays.com

Other international +1 703-435-7770
Fax +1 703-435-3180

7) OPEN SNAP FRAME AND REMOVE ACRYLIC PANELS.

8) SET TOP CABINET ONTO DISPLAY CASE AND VERIFY TOP CABINET IS SECURED BY FRENCH CLEAT.

9) TAKE LIGHT JUMPER THAT IS CONNECTED TO LIGHT IN TOP CABINET AND DROP DOWN INTO DISPLAY CASE AND PLUG INTO TOP LIGHT IN DISPLAY CASE.

10) MAKE SURE ALL LIGHTS WORK.

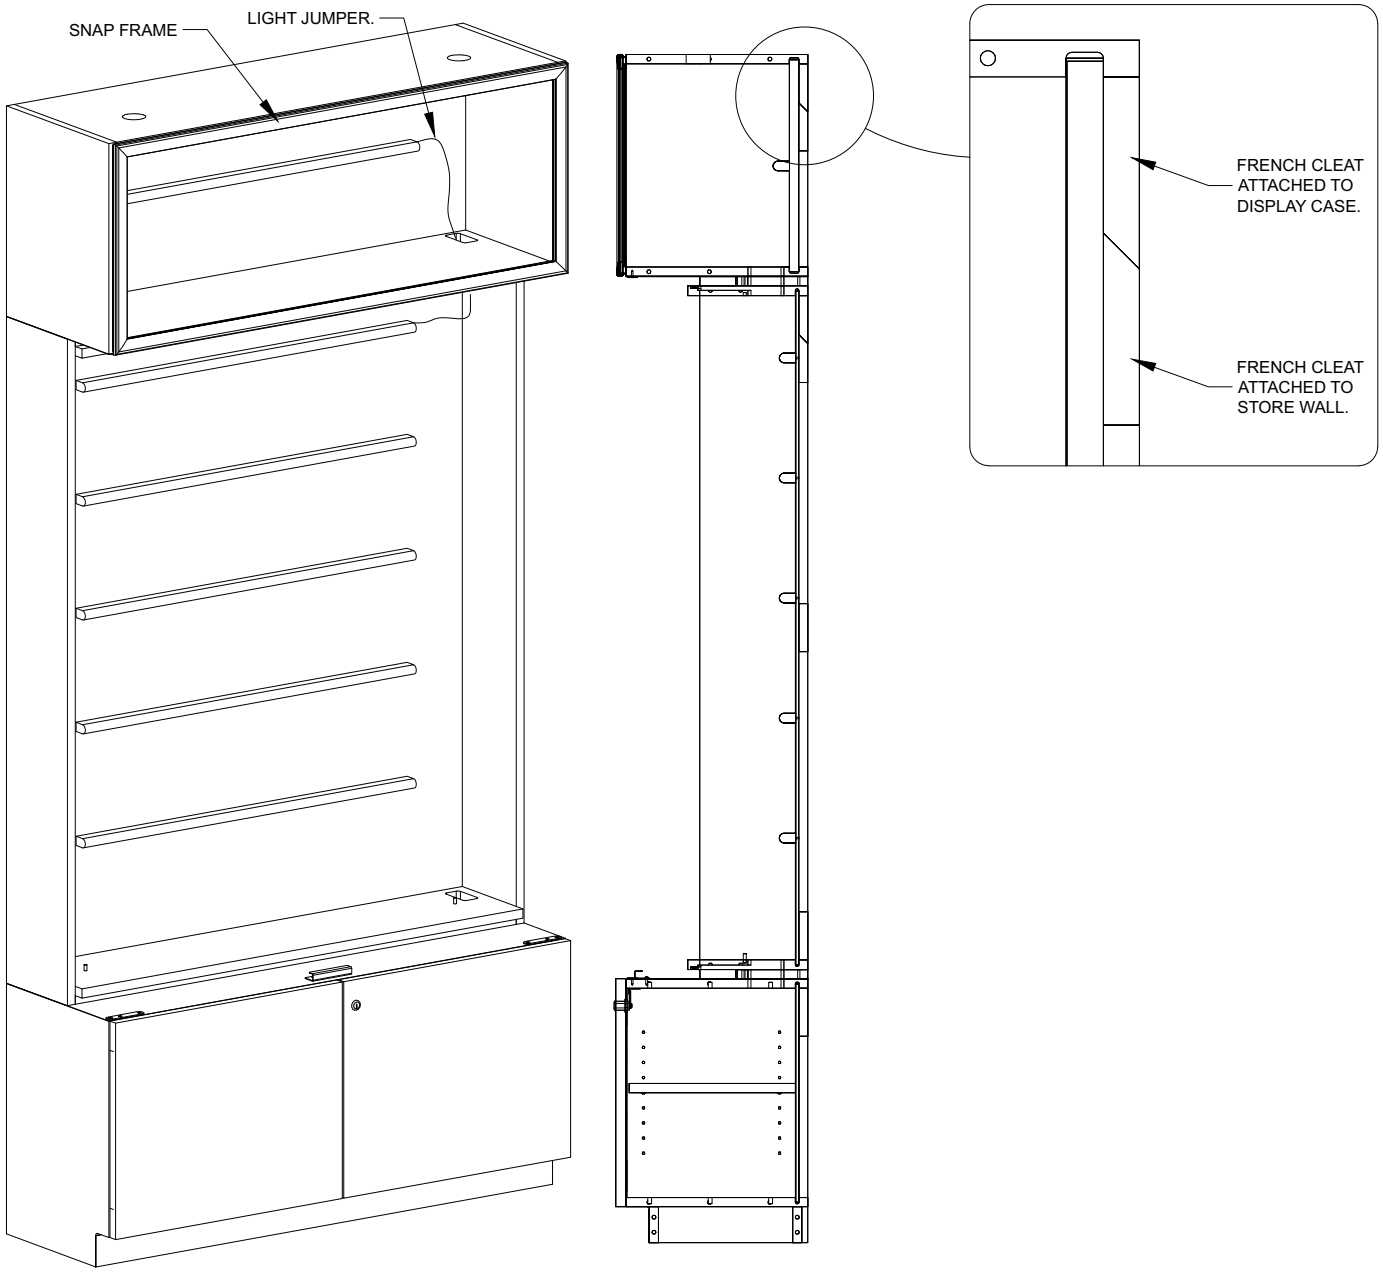

TREND-48 Eyewear & Sunglass Wall Cabinet Assembly Instruction

Frame Displays USA
22821 Silverbrook Center Dr., Suite 140, Sterling, VA 20166
1-703-435-7770
www.framedisplays.com • info@framedisplays.com

Frame Displays CANADA
416-877-7415
www.framedisplays.com • info@framedisplays.com

Other international +1 703-435-7770
Fax +1 703-435-3180

11) RE-INSTALL ACRYLIC CUBE

12) PLACE DESIRED GRAPHIC IN BETWEEN WHITE AND CLEAR SNAP FRAME ACRYLIC PANELS.

13) RE-INSTALL ACRYLIC PANELS IN SNAP FRAME.

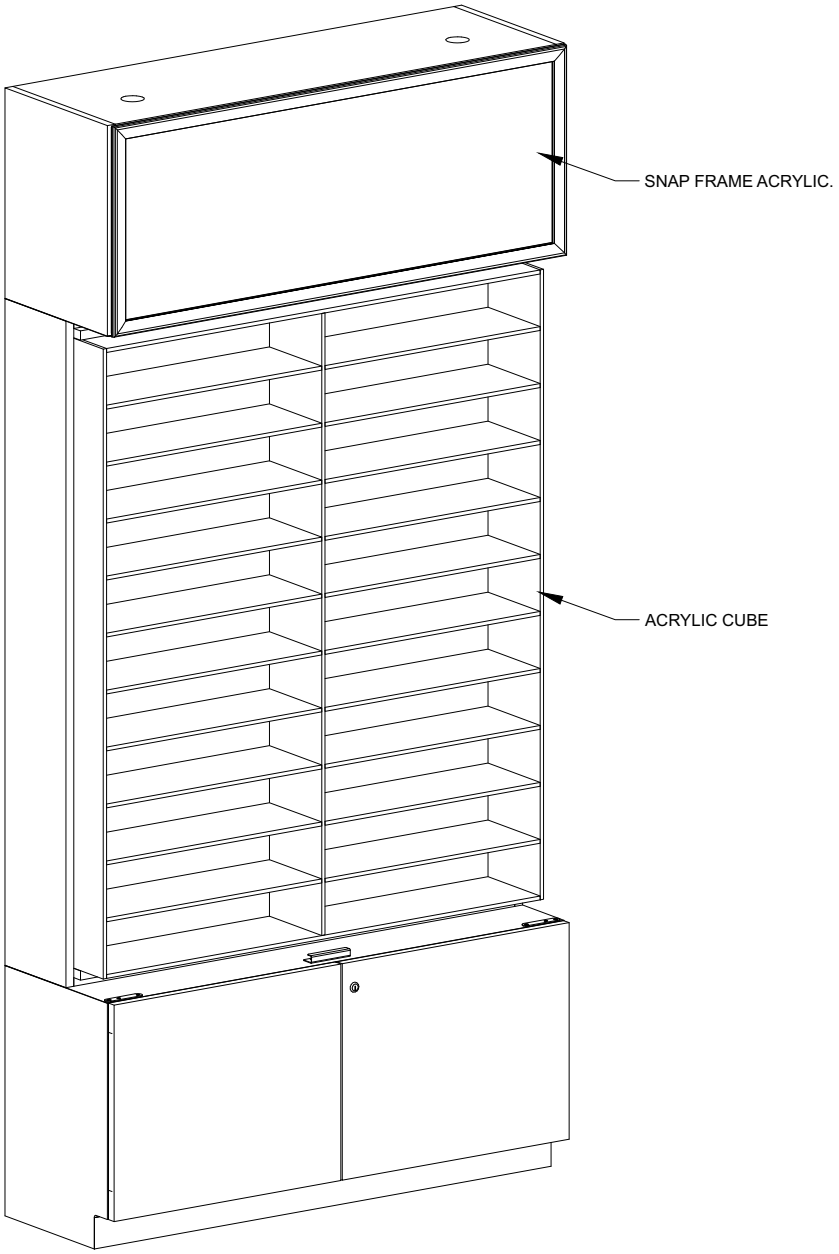

TREND-48 Eyewear & Sunglass Wall Cabinet Assembly Instruction

Frame Displays USA
22821 Silverbrook Center Dr., Suite 140, Sterling, VA 20166
1-703-435-7770
www.framedisplays.com • info@framedisplays.com

Frame Displays CANADA
416-877-7415
www.framedisplays.com • info@framedisplays.com

Other international +1 703-435-7770
Fax +1 703-435-3180

14) INSTALL GLASS DOOR HINGES BY INSERTING BUSHING OF HINGE INTO METAL PLATES ATTACHED TO BASE CABINET AND TOP CABINET.

15) SLIDE GLASS DOORS INTO HINGES AND SECURE WITH SET SCREWS.

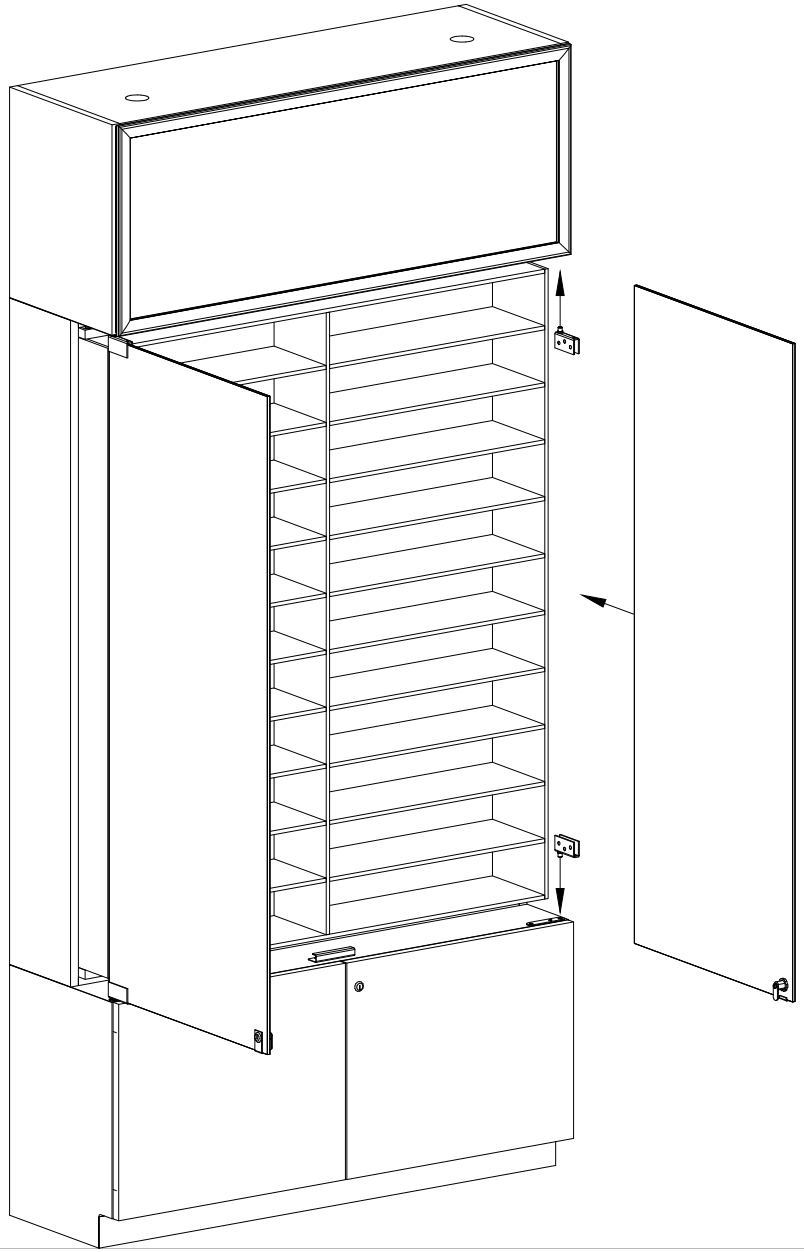

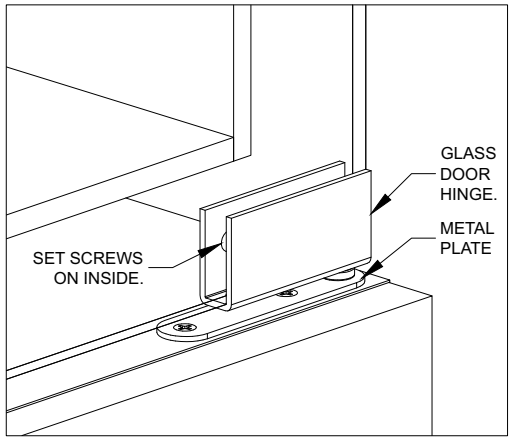

TREND-48 Eyewear & Sunglass Wall Cabinet Assembly Instruction

Frame Displays USA
22821 Silverbrook Center Dr., Suite 140, Sterling, VA 20166
1-703-435-7770
www.framedisplays.com • info@framedisplays.com

Frame Displays CANADA
416-877-7415
www.framedisplays.com • info@framedisplays.com

Other international +1 703-435-7770
Fax +1 703-435-3180